

Information and safety recommendations

Applicability

This Specification Manual is applicable for installations with under slab soil & waste systems.

Validity


This Specification Manual is valid from February 2018. With the appearance of this manual previous manuals are no longer valid. The actual technical documentation can be downloaded at www.akatherm.com.


This document is protected by copyright. The resulting rights, in particular those of translation, reprinting, reuse of illustrations, the radio broadcasting, reproduction by photo-mechanical or similar means, and storage in data processing systems, are reserved.


This Specification Manual is produced with extreme care. All measurements and weights are approximate and errors and changes reserved. Akatherm BV does not accept any liability for damage caused by not or incorrect mentioned data in this manual.

Important information and pictograms

This manual contains pictograms to emphasize important or beneficial information.

 Important information to take into account

 Consult the Akatherm dBlue Sales Office

 Benefit


Disclaimer

Follow all applicable national and international assembly, installation, accident prevention and safety regulations. Furthermore follow the information in this Specification Manual during the installation of drainage systems.

Also follow the applicable laws, standards, guidelines, regulations and instructions for environmental protection, professional associations and the local utility companies.

Applications not covered in this Specification Manual (special applications) require consultation with our technical department. For specific advice consult the Akatherm dBlue Sales Office.

The planning and installation instructions are directly related to the respective Akatherm dBlue products. The reference to standards or regulations is on a general level. Be aware of the current status of guidelines, standards and regulations. Other standards, regulations and guidelines regarding the planning, installation and operation of drainage or building systems need to be taken into account also and are not part of this Specification Manual.

 Please check for your safety and for the proper application of our products at regular intervals if your present Specification Manual has been replaced by a new version. The issue date is always mentioned on the cover. The valid technical information can be obtained at your Akatherm dBlue wholesaler, the Akatherm Export Sales Office and be downloaded at www.akatherm.com.

Safety and operating instructions

- Read the safety and operating instructions completely for your own safety and the safety of others before the start of installation
- Store these instructions and keep them available
- If the safety instructions or installation instructions are unclear, please contact the Akatherm dBlue Sales Office

General precautions

- Keep your work area clean and free of obstructing objects
- Provide adequate lighting of your work area
- Keep unauthorized persons away of tools and the work area, especially at renovations in inhabited areas
- Use only Akatherm dBlue system components. The use of non-system components can lead to leakage or other problems

During assembly

- Always read and follow the operating instructions of the used tool
- Improper use of tools can cause severe cuts, bruising or dismemberment
- Improper use of tools can damage components and cause leaks
- Pipe cutters have a sharp blade. Store and handle without risk of injury
- Note the safety distance between your hand and cutting tool when cutting the pipes
- Never grab the cutting zone of the tool or moving parts during the cutting process